# **PREMIER**

# MANUAL DE INSTRUCCIONES SOPORTE PARA TV LED/LCD (23"-42") WM-4988



#### **ESTIMADO CLIENTE**

Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia. Si necesita soporte adicional, no dude en escribir a: *info@premiermundo.com* 



# ÍNDICE

$\Delta$ INSTRUCCIONES DE SEGURIDAD	_
INSTRUCCIONES DE INSTALACIÓN	. 2
SEPARAR LA PLACA VESA	. 3
MONTAJE EN PARED DE MADERA	. 4
MONTAJE EN PARED DE CONCRETO O LADRILLO	. 5
INSTALACIÓN DE LA PLACA VESA	. 6
INSTALAR EL TELEVISOR	. 7
MANTENIMIENTO	. 7

# LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 - ELECTRIC (353-2874)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

#### NOTA

Nos reservamos el derecho de modificar las especificaciones, características y/u operación de este producto sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.




# **⚠INSTRUCCIONES DE SEGURIDAD**

- Lea este manual de instrucciones antes de comenzar la instalación del soporte y siga las instrucciones aquí contenidas para una adecuada instalación. En caso de tener alguna duda, contacte a su distribuidor local.
- Esta unidad debe ser instalada SOLO como se indica en este manual de instrucciones. Una instalación incorrecta puede causar daños o serias heridas .
- El soporte debe ser instalado preferiblemente por una persona con habilidades mecánicas y experiencia en instalación.
- Asegúrese que la superficie donde hará el montaje puede soportar el peso combinado del equipo y todos los componentes.
- Si se hace el montaje en una pared de madera, asegúrese que los chazos son puestos correctamente en el centro de las vigas. Se recomienda el uso de un buscador electrónico de vigas.
- Utilice la ayuda de una persona para levantar los equipos de manera segura.
- Apriete los tornillos con firmeza pero nos los sobre-apriete ya que puede llegar a romper las partes.
- Este producto está diseñado para uso en el hogar. No lo utilice en exteriores.

# INSTRUCCIONES DE INSTALACIÓN


#### **PIEZAS**

**NOTA:** Asegúrese de que todas las piezas estén completas antes de comenzar. Si detecta cualquier falla póngase en contacto con el fabricante.

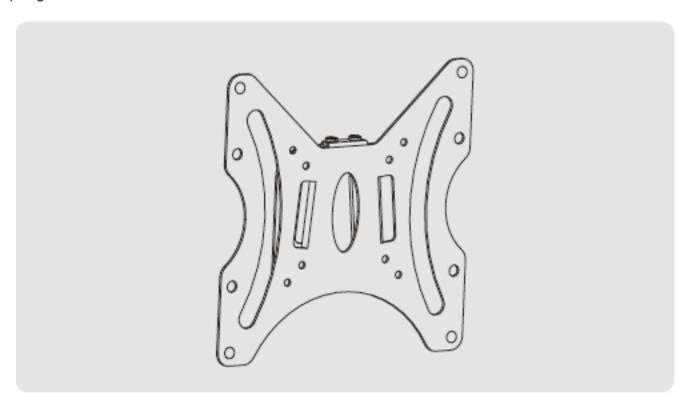



## Paquete M

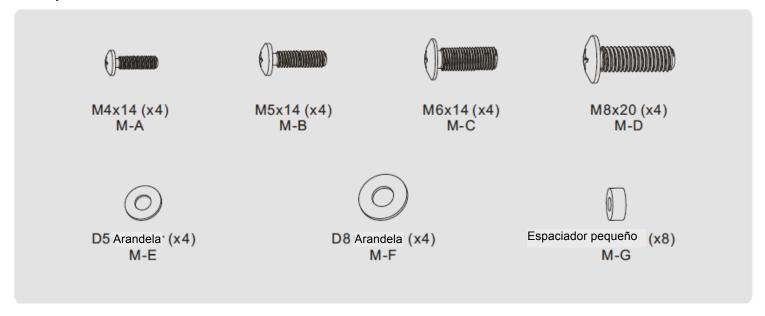

## Paquete W





# SEPARAR LA PLACA VESA





## MONTAJE EN PARED DE MADERA

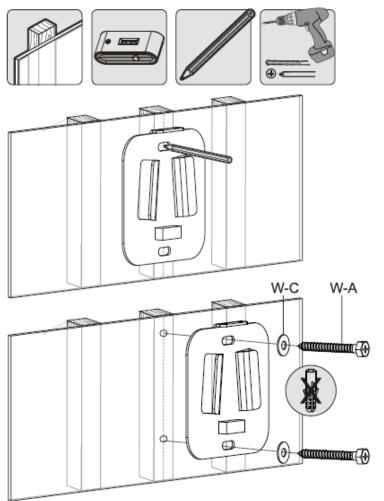

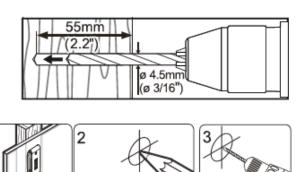

Encuentre y Marque la ubicación Taladre los exacta de los agujeros de montaje agujeros piloto






Atornille el soporte en la pared

# 1 IMPORTANTE

- Asegúrese que la superficie donde hará el montaje puede de hecho soportar el peso combinado del equipo y todos los componentes.
- Apriete los tornillos con firmeza pero nos los sobre-apriete ya que puede llegar a romper las partes.
- Asegúrese de que los chazos son puestos correctamente en el centro de las vigas. Se recomienda el uso de un buscador electrónico de vigas.
- Los instaladores son responsables de proporcionar los accesorios para otro tipo de montajes en otros materiales.



# MONTAJE EN PARED DE CONCRETO O LADRILLO

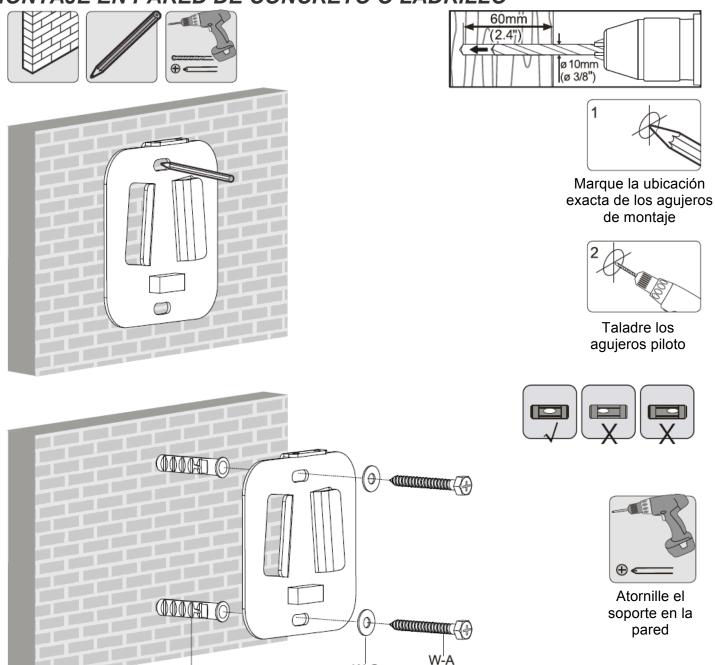


# !\text{IMPORTANTE

W-B

• El instalador debe verificar que la superficie donde hará el montaje puede de hecho soportar el peso combinado del equipo y todos los componentes.



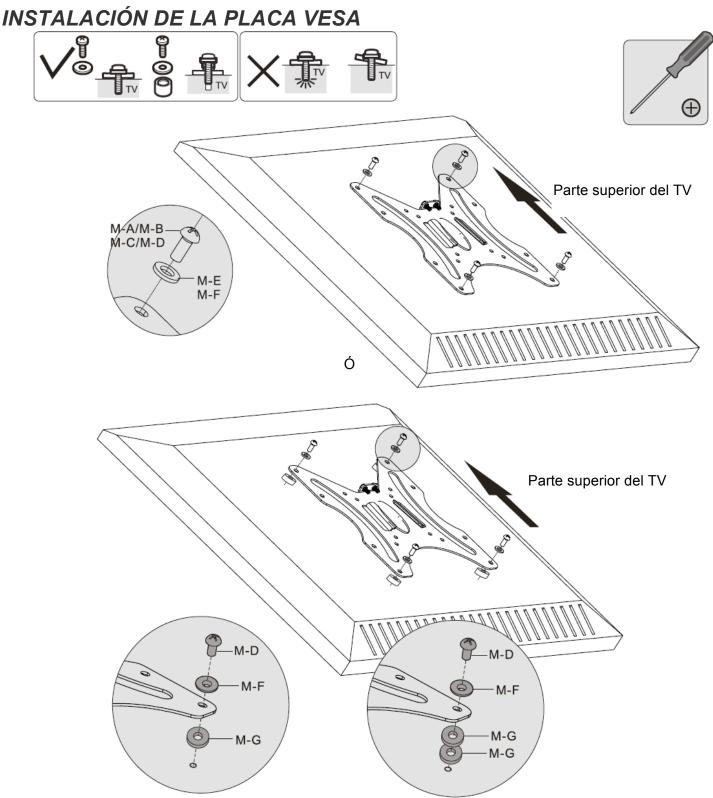


**Nota:** Elija apropiadamente los tornillos, arandelas y espaciadores (De ser necesario) de acuerdo al tipo de televisor. Atornille la placa vesa en el televisor.

Apriete todos los tornillos pero no los sobre apriete, ya que puede romperlos P-6



## INSTALAR EL TELEVISOR

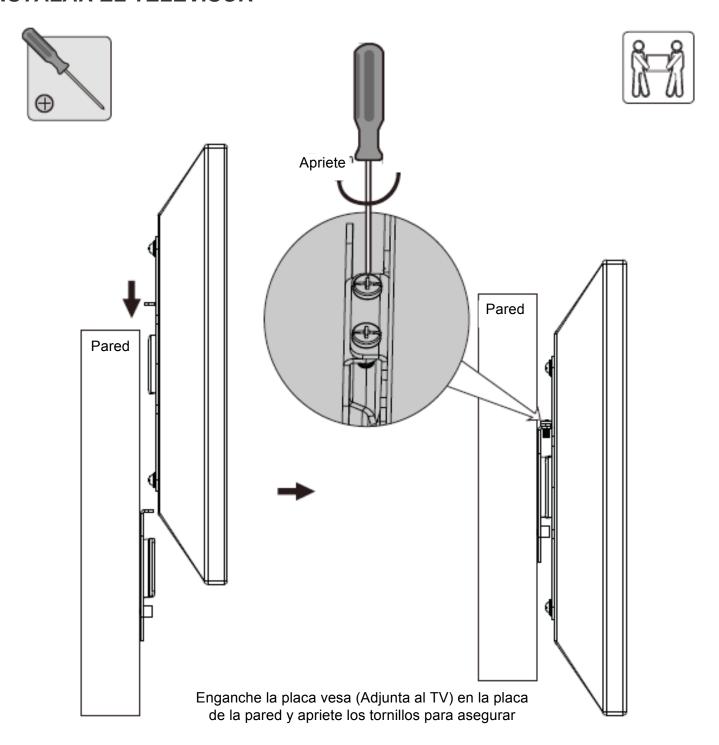

# **MANTENIMIENTO**

- Una vez esté colocado el televisor en el soporte verifique que todo esté seguro y firme.
- Revise los tornillos al menos cada tres meses.
- Si tiene cualquier duda sobre la instalación, póngase en contacto con el fabricante.



#### INSTRUCTION MANUAL LED / LCD TV BRACKET (23"-42") MAX.LOADING 30KG WM-4988



#### **DEAR CUSTOMER**

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

If you need extra support, please write to info@premiermundo.com



#### PREMIER CUSTOMER SERVICE

Venezuela:	0800 - ELECTRIC (353-2874)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

#### NOTE

This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.



NOTE: Read the entire instruction manual before you start installation and assembly.


# **⚠ WARNING**

- Do not begin the installation until you have read and understood all the instructions and warnings contained in this installation sheet. If you have any questions regarding any of the instructions or warnings, please contact your local distributor.
- This mounting bracket was designed to be installed and utilised ONLY as specified in this manual. Improper installation of this product may cause damage or serious injury.
- This product should only be installed by someone with good mechanical ability who has basic building experience and fully understands this manual.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- If mounting to wood wall studs, make sure that mounting screws are anchored into the center of the studs. The use of a stud finder is highly recommended.
- Always use an assistant or mechanical lifting equipment to safely lift and position the equipment.
- Tighten screws firmly, but do not over tighten. Over tightening can cause damage to the items, This greatly reduces their holding power.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.




#### **Component Checklist**

**IMPORTANT:** Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, telephone your local distributor for a replacement.

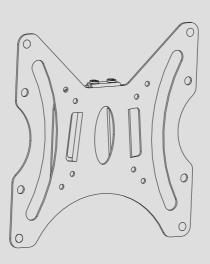

#### Package M

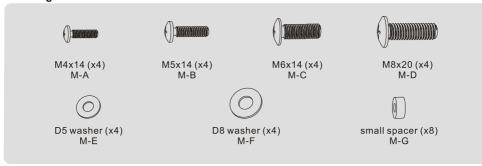


#### Package W







### 1. Separating the VESA Plate

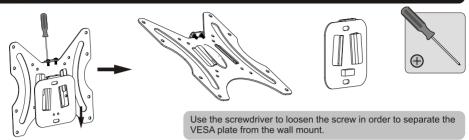

#### 2a. For Wood Stud Wall Mounting

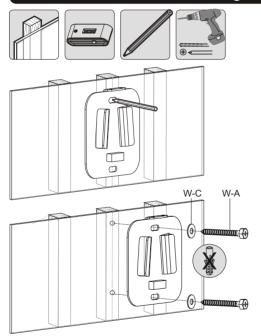





Find and mark the exact Drill pilot holes location of mounting holes.






Screws the wall plate onto the wall


# ♠ WARNING

- Make sure that mounting screws are anchored into the center of the studs. The use of a stud finder is highly recommended.
- Installers are responsible to provide hardware for other types of mounting situations.
- Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.



#### 2b. For Solid Brick and Concrete Mounting

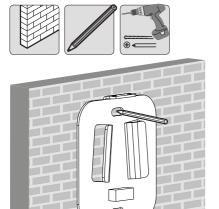






Mark the exact location of mounting holes



Drill pilot holes

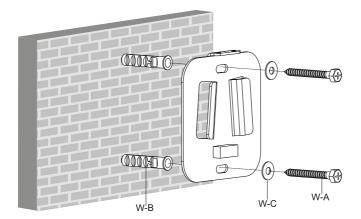






Screws the wall plate onto the wall

# WARNING

Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.



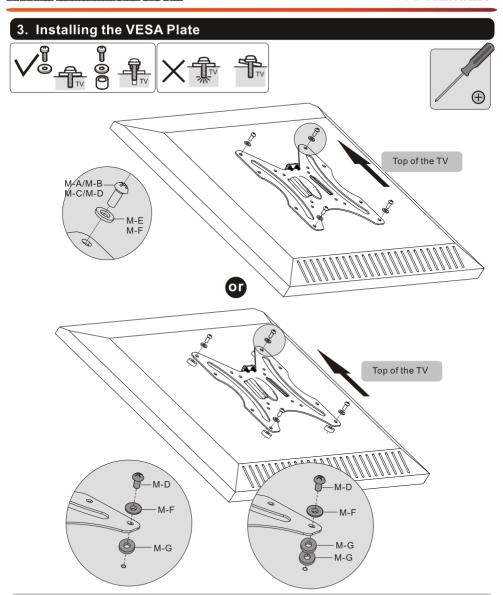


**Note:** Choose the appropriate screws, washers and spacers (if necessary) according to the type of screen. Screw the VESA plate onto the TV.

 $\Lambda$ 

Tighten all screws but do not over tighten.

#### **PREMIER**

## 4. Installing the TV

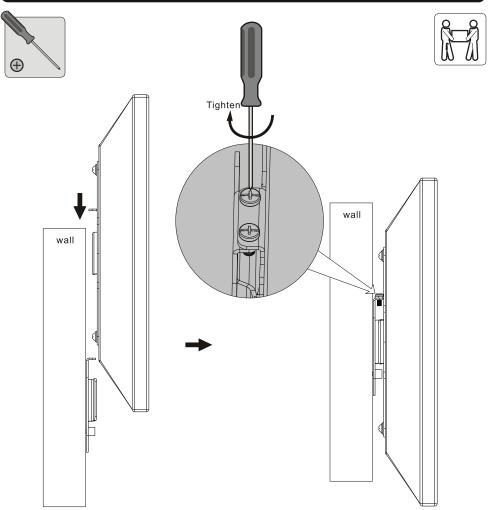

Hook the VESA plate(attached the TV) onto the wall plate and tighten the screws to secure.

#### Maintenance

- Check that the bracket is secure and safe to use at regular intervals(at least every three months).
  Please contact your distributor if you have any questions.